Autonics

Non-indicating Pressure Transmitters TPS30 SERIES

INSTRUCTION MANUA



Thank you for choosing our Autonics product. Please read the following safety considerations before use.

Safety Considerations

lepha symbol represents caution due to special circumstances in which hazards may occur.

Warning Failure to follow these instructions may result in serious injury or death. ▲ Caution Failure to follow these instructions may result in personal injury or product damage.

1. Fail-safe device must be installed when using the unit with machinery that may cause serious iniury or substantial economic loss. (e.g. nuclear power control medical equipment, ships, vehicles, railways, aircraft, combustion apparatus, safety equipment, crime/disaster prevention devices, etc.)

Failure to follow this instruction may result in personal injury, fire or economic loss.

2. Do not use the unit in the place where flammable/explosive/corrosive gas, high humidity, direct sunlight, radiant heat, vibration, impact, or salinity may be present. Failure to follow this instruction may result in explosion or fire.


3. Do not disassemble or modify the unit.

Failure to follow this instruction may result in fire or electric shock."

⚠ Caution

- Do not apply beyond the rated pressure.
 Failure to follow this instruction may result in product damage 2. Use the unit within the rated specifications.
- Failure to follow this instruction may result in fire or product damage
- 3. Fix the cable through the cable connection part and do not turn the cable of the
- Failure to follow cause instruction may result in product damage 4. Keep metal chip, dust, and wire residue from flowing into the unit.
- Failure to follow this instruction may result in fire or product damage.
- Check the polarity of the contact before wiring the unit.
 Failure to follow this instruction may result in product damage by a fire.
- 6. This product is designed to detect the pressure of noncorrosive fluid. Do not use for corrosive fluid.
- Failure to follow this instruction may result in product damage.
- 7. Use a dry cloth to clean the unit, and do not use water or organic solvent. Failure to follow this instruction may result in fire.

Connections

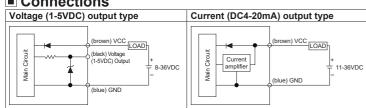

Cable color is only for cable type

■ Troubleshoot	ing					
Error	Troubleshooting					
No outputs	Check the power supply. Check the polarity (+, -) when wiring the cable. Check the connection part.					
Abnormally fluctuating output	Check the power supply. Check the supplied pressure. Check the pressure line.					
Out of zero point output value	Check the power supply. Check the load resistive value of current output type for a receiver is over 700Ω . (when supplying $24VDC$) Check the measuring point and transmission distance. Check the line resistance is below 700Ω .					

*The above specifications are subject to change and some models may be discontinued without notice. without notice.

**Be sure to follow cautions written in the instruction manual and the technical descriptions (catalog, homepage).

Ordering Information

TPS30	_ G	2	9 V	G8 _	_ 00	(0 to 0.5MPa)			
1	2	3 (4 5	6	7	8			
Description									
①Item		TPS30	Pressu	re Transn	nitter				
O14		-	_			3			


@Measurement	G	Gauge pressure, sealed gauge pressure ^{*1}							
pressure	Α	Absolute pressure							
	1	Head type							
	2	DIN43650-A connector type							
③Cable	3	M12 connector type							
	4	DT04-3P connector type							
	5	Cable type							
		Gauge pressure	Absolute pressure						
	3	0 to 0.1MPa	0 to 0.1MPa						
	4	0 to 0.2MPa	0 to 0.2MPa						
	5	0 to 0.7MPa	0 to 0.7MPa						
	6	0 to 1MPa	0 to 1MPa						
	7	0 to 2MPa	0 to 2MPa						
	8 ^{×2}	0 to 3.5MPa	1—						
	9 ^{×2}	0 to 5MPa	T—						
	A ^{⊛2}	0 to 10MPa	 						
O.D	B ^{⊛2}	0 to 20MPa	1—						
④ Pressure range	C*2	0 to 40MPa	T—						
	D*2	0 to 50MPa	 						
	E ^{×2}	0 to 60MPa	I—						
		Sealed gauge pressure ^{*1}							
	F	-0.1 to 0MPa							
	G	-0.1 to 0.1MPa							
	Н	-0.1 to 0.7MPa							
	J	-0.1 to 1MPa							
	K	-0.1 to 2MPa							
	Z	Others							
© Outrout to an a	V	Voltage (1-5VDC) output							
⑤Output type	Α	Current (DC4-20mA) output							
	G8	G3/8 (PF) (EN837)							
	G4	G1/4 (PF) (EN837)							
@Pressure port	R2	R1/2 (PT) (DIN3852)							
	N4	NPT1/4 (DIN3852)							
	ZZ ^{×3}	Others (option)							
	00	Not used							
⑦Option	21	"I" type 2m							
(connector cable)**4	2L	"L" type 2m							
(connector cable)	51	"I" type 5m							
	51	"I" type 5m							

- ®User pressure range User pressure range ×1: The pressure is sealed gauge pressure. The unit is sealed structure. It is based on atmospheric pressure 101.3kPa (1.013bar)
- *2: G1/4 is the standard pressure port. For the other pressure ranges, G3/8, R1/2 are standard pressure ports.
- To file option prosage ranges, over, this are standard prosage points.


 The option ports are sold separately. In case of large amount ordering, contact the Autonics for manufacturing the requested pressure port.


 Only for M12 connector type.
- %5: Write the desired pressure range and it is the default of user pressure range (select "Z" at @Pressure range)

Dimensions

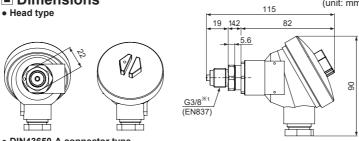

DIN43650-A connector type

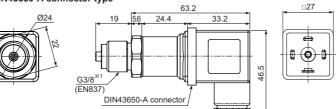

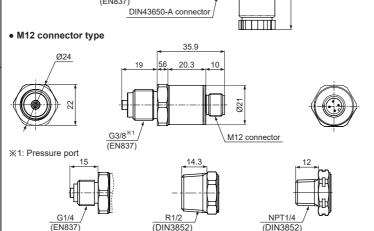



Specifications

	TPS30							¥1									
						Sealed gauge pressure**1 -0.1 to 0 -0.1 to 0.1 -0.1 to 0.7 -0.1 to 1 -0.1 to 2					Gauge pressure						
Rated pressure range (MPa)	0 to 0.1) to 0.2	0 to 0.7	0 to 1	0 to 2						0 to 3.5	0 to 5	0 to 10	0 to 20	0 to 40	0 to 50	0 to
Expanded analog output	0 to 0.11) to () 22	0 to 0 77	0 to 1 1	0 to 2.2		-0.1 to	-0.1 to		-0.1 to	0 to 3.85	0 to 5.5	0 to 11	0 to 22	0 to 44	0 to 55	0 to
range (MPa)				-			0.12	0.78		2.21							1
Max. pressure range (MPa)		0.6		3	3		0.6	3		3			50	80	120	120	120
			3	3	3	0.6	0.6	3	3	3	15	30	75	120	160	160	160
	Liquid, gas																
Power supply	 Voltage of 			DC== (ripp	le P-P: m	ax. 10%)	• Cu	rrent outp	ut type: 11	-36VDC=	ripple P	-P: max.	10%)				
	90 to 1109																
Current consumption	 Voltage of 	output typ	pe: max. 2	20mA •	Current o	utput type	: max. 30	mA									
	Max. 1ms																
	Reverse p																
Output type	 Voltage of 		pe: 1-5VD	C=- •	Current of	output type	e: DC4-20	mA			,						
	-10 to 80°C										0 to 80°C						
	Max. ±0.5°		ncluding li	nearity, hy	/steresis,	reproduci	bility)										
	Max. ±0.2% F.S.																
	Max. ±0.2% F.S.																
	Max. ±0.1% F.S./10°C (standard), max. ±0.25% F.S./10°C (max.)																
	Max. ±0.1% F.S./10°C (standard), max. ±0.25% F.S./10°C (max.)																
Temperature characteristics	— -25 to 100°C: max. ±1.5% F.S. / -40 to 125°C: max. ±2.5% F.S.																
	Current output type: max. 700Ω (supplying 24VDC)																
	500VAC 50/60Hz for 1 minute																
	Over 100MΩ (at 500VDC megger)																
© ≒ temp. Current output	Head type, DIN43650-A connector type, M12 connector type, DT04-3P connector type: -40 to 85°C, storage: -40 to 125°C Cable type: -40 to 80°C, storage: -40 to 80°C																
≥ ≝ Ambient humidity	35 to 85%RH																
□ Fluid temp.	-40 to 125℃																
Vibration	10g, 20 to 2,000Hz 20g, 20 to 2,000Hz																
Shock	100g/6ms 500g/1ms																
Tightening torque	Max. 10N·m																
Protection structure	Head type, M12 connector type, DT04-3P connector type, cable type: IP67 (IEC standard) DIN43650-A connector type: IP65 (IEC standard)																
Material	Stainless steel 316L (head component of head type: aluminium diecasting), connector: Polybutylene terephthalate G30, water-proof rubber: Silicon																
Connection	Voltage output type: +, -, Vout Current output type: +, -																
Approval	CE	1 -51	, , , -			71 .											
•		e. approx	330g (ap	prox 250c	1)												
Weight **2							connecto	r tyne: anr	rox 130a								

Connector


Voltage output type

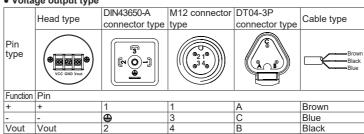


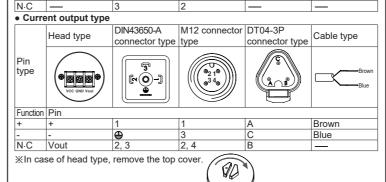


• DT04-3P connector type 18.8 19



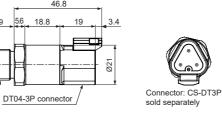

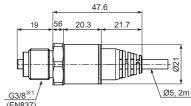

Connection Cable (sold separately) • CID3-2/CID3-5

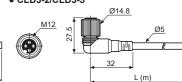

(unit: mm)

Model	L(m)	Meterial			
C□D3-2	2	PVC			
C D3-5	5				

X Only for M12 connector.

Cautions during Use

Ø14.8

- Follow instructions in 'Cautions during Use'. Otherwise, It may cause unexpected accidents 8-36VDC, 11-36VDC power supply should be insulated and limited voltage/current or Class 2, SELV power supply device.
- When installing the unit on pipe line, use the hexagon part of connections not to turn the unit with a pipe wrench. Do not use the unit with strong vibrations
- Store the unit at the place without moisture, dust, and vibration.
- This product which does not have drive part at sensing part does not need to repair it. Even though inside of pressure pipe is normally clean, it needs to take maintenance once a year as below instructions.
 - Check the broken status of outside
 - ② Check the pressure slot, cleanliness inside, and corrosion state.
 - 3 Short each terminal and check the insulation resistance between the case and power. When removing a sensor for maintenance, follow the below instructions.
- 1) Replace an O-ring which is used once.
- ②Be sure that diaphragm part is not damaged
- Switch or circuit breaker for suppling or cutting off the power should be installed nearby users for convenient control
- The unit cannot be repaired due to disassembled structure.
- The unit is fixed with bolt and nut at the both sides of case Do not press excessive load (approx. 300kg/cm²), or it may cause damage to the unit.
- 10. This unit may be used in the following environments.
- 1 Indoor / Outdoor (in the environment condition rated in 'Specifications')
- ② Altitude max. 2.000 m
- ③ Pollution Degree 2
- 4 Installation Category II

www.autonics.com | +82-51-519-3232 | sales@autonics.com